

Welcome to the Hartlands Vincent Gallery apartment

LIGHTS

1. Motion detectors in the corridor will automatically turn the lights on for a few minutes, please do not press them.
2. The bedrooms and kitchen/lounge have touch sensitive light switches.
 - a. Tap the switch to turn these lights on/off.
 - b. Touch and hold the switch to cycle through from bright to dim.

NOTE: If the lights seem not to be working, they may just be set to their dimmest setting, touch and hold to bring them back up to a brighter setting.

THE TV CONTROLLER



- 1. Microphone**
Speak into the microphone when using Alexa.
- 2. Alexa LED**
 - Turquoise LED lights when you press and hold the Alexa Button.
 - Blue LED flashes while Alexa responds.
 - Red LED will light to show low batteries.
- 3. STANDBY Button**
Press to switch between on and standby.
- 4. Alexa Button**
Press and hold when talking to Alexa.
- 5. NAVIGATION (▲) button**
Press to navigate up.
- 6. SELECT Button**
Press to select items in menus.
- 7. NAVIGATION (◀) button**
Press to navigate left.
- 8. NAVIGATION (▶) button**
Press to navigate right.
- 9. NAVIGATION (▼) button**
Press to navigate down.
- 10. HOME Button**
 - Press to view the home screen.
 - Press and hold while watching LIVE TV to access the LIVE TV menu.
- 11. BACK Button**
Press the move back through menus.
- 12. OPTION Button**
Press to view more options on your selected item.
- 13. PLAY/PAUSE**
Press the play or pause videos.
- 14. REWIND Button**
Press to rewind videos.
- 15. FAST FORWARD button**
Press to fast forward videos.
- 16. GUIDE Button**
Press to view the Live TV Programme Guide.
- 17. VOLUME +/- buttons**
Press to increase and decrease the volume level.
- 18. CHANNEL ▲▼ buttons**
 - Press to scroll up and down the channel list.
- 19. MUTE**
Press to mute or un-mute the volume.
- 20. NUMBER Buttons**
Press to select a Live TV channel.
- 21. SUBTITLE Button**
Press to access the AUDIO menu where you can switch Audio Description and Subtitles on and off.
- 22. TEXT Button**
Press to enter interactive services if available.
- 23. PRIME VIDEO Button**
Press to enter Prime Video (internet connection required).
- 24. NETFLIX Button**
Connects to Netflix for viewing online TV shows and films (internet connection required).
- 25. LIVE TV Button**
Press to watch live TV.
- 26. APPS Button**
Press to access 'Your Apps & Channels'.
- 27. COLOURED Buttons**
 - Press the RED button to access Red button services if available.
 - Access the TELETEXT items (LIVE TV mode).



- Pressing the **STANDBY, HOME, SELECT, ALEXA, PRIME VIDEO, NETFLIX, LIVE TV, and APPS** buttons will turn the TV on from standby.
- Your remote control should automatically pair to your TV, but if it didn't press and hold down **BACK, OPTION** and **◀** (press 3 buttons at the same time) for **10 seconds** and it will pair.





COOKING WITH THE HOB

1. Press the  button to turn on the controls.
2. Choose one of four Hobs with the  buttons
3. Use the + and - buttons to raise or lower the temperature (1 = low 9 = high P = highest)



NOTE: These hobs can heat very quickly; do not leave anything unattended whilst on the hob

USING THE HOB TIMER


1. Select a Hob with one of the  buttons
2. Press the  button
3. Use the + and - buttons to set the minutes for the timer

NOTE: Once the timer is on, it will turn off automatically. This will not affect the other 3 Hobs.

CHILD SAFETY ON THE HOB

1. Press and hold the  button at any time to activate/deactivate Hob child lock.
2. When activated the only button that will work is the  button which will turn off all hobs.
3. Removing a pan from the hob will disconnect the heating element, place pan again to continue cooking.

COOKING WITH THE OVEN

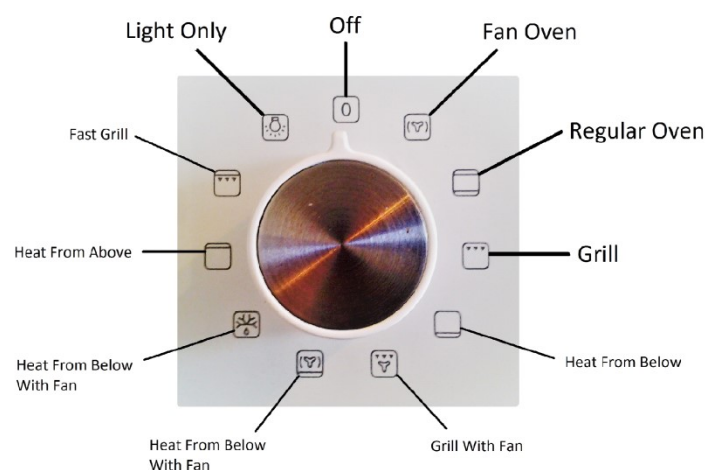

NOTE: The oven door has a safety latch (top right of the door). Simply lift the latch to open the door.

CHILD SAFE KNIFE BLOCK

The knife block has a child lock keeping them in place; pull up the button on the sides to release the knives.